

USER'S MANUAL

Most Cost-effective Scouting Trail Camera



Contents

1. Introduction.....	- 1 -
1.1 Fully Functionality Introduction	- 1 -
1.2 Application	- 1 -
1.3 Power Supply.....	- 1 -
1.4 Attention	- 1 -
1.5 Key Features.....	- 2 -
2. Whole View and Details of Camera	- 3 -
2.1 Figure 1: Front View of Camera;	- 3 -
2.2 Figure 3.2: Bottom View of Camera;.....	- 3 -
2.3 Figure 3.3: Side View of Camera.	- 4 -
2.4 Figure 3.4: Internal View of Camera	- 5 -
2.5 Function Keys & Other Details.....	- 6 -
3. Quick Start.....	- 6 -
3.1 How to start the camera?	- 6 -
3.2 How to set the functions?.....	- 6 -
4. Operation List.....	- 7 -
4.1 Video/Photo Playback	- 7 -
4.2 Delete:	- 7 -
4.3 Format of SD Card	- 7 -
4.4 Operation Menu	- 7 -
5. Specification	- 9 -
6. Upgrade to GPRS Model by Inserting GPRS Module.....	- 10 -
7. MMS, SMS, SMTP, FTP, TCP/UDP Functions of GPRS Model(2.6CM).....	- 10 -
8. SD Cards Selection and Battery Life Test Report	- 10 -
8.1 SD Card Selection	- 10 -
8.2 Battery Life Test Report for Reference	- 11 -
9. Trouble Shooting.....	- 11 -
9.1 Photos Do Not Capture Subject of Interest.....	- 11 -
9.2 Camera stops taking images or won't take images.....	- 11 -
9.3 GPRS version camera stops sending photos to email or mobiles.....	- 12 -
10. Warranty.....	- 12 -
11. Plan for Upgrade 3G/Wifi Digital Camera.....	- 12 -

1. Introduction

Thank you for choosing one of our easy operation highly qualified products. You now may enjoy the excellences reflected on this series product. This 12MP HD digital camera was totally R&D by our diligent and smart engineers based on feedbacks and requirements from customers globally. May you also enjoy and adore this product as we do. And our company is always open-minded with willing to adopt creative ideas from you.

1.1 Fully Functionality Introduction

Besides all the functions you may experience from any other similar product; This digital camera is aimed to offer user the most easy to use experience with gradually grow functions added; i.e.: GPRS model, SMS remote control, to configure camera various settings and enable camera to shoot a photo and send back instantly; etc. Follow up with possible upgrade unique features as 3G & Wifi.

1.2 Application

This digital camera is an ideal product for housing security, warehouse surveillance, and monitoring wild animals with its camouflage appearance and nice shape. It is convenient to install or fasten, could be used to take photographs manually and carry on long-time videos in Test mode.

- a. Instant surveillance camera for home, office, construction site, and warehouse, etc.;
- b. Motion-triggered infra-red night vision surveillance;
- c. Animal observation and hunting;

1.3 Power Supply

A. AA Alkaline Batteries

This camera can either work with 4 or 8 AA Alkaline batteries. Pls note that the voltage of rechargeable AA batteries (1.2V) is insufficient to power this device. Batteries should be inserted as indicated inside the battery case. Upside down batteries electrode may cause device malfunction. Also, we strongly recommend changing the batteries when power icon on camera screen is empty or when you receive lower battery SMS alert (GPRS Model only).

B. Solar Panel

To bring users better using experience, our engineers designed this camera to be able to work with most standard 6~12V lithium battery build-in solar panels.

C. Power Adaptor—Security Surveillance Purpose

This camera can also be powered by an external 6~12V DC adapter. Recommend to remove the alkaline batteries when power adapter is used, to avoid surcharging. Electrical power is recommended for security purposes.

1.4 Attention

1. Insert the SD memory card correctly, camera does not support SD card hot swap

(insertion).

2. Please use AA battery with good quality in order to prevent battery cells from corrosion of leaked acid.
3. Use right adaptor (6V/1A or 2A) of this camera to supply power, and do not invert the electrode when put in batteries.
4. In Test mode, camera will automatically power off in 1min without any operations. Please manually turn ON it as if you want to use it again.
5. Don't interrupt power supply during system upgrade, please deliver it back to factory if the device doesn't work after upgrading.
6. Do not frequently insert or pull out SD card and battery or plug in and out the adaptor when the camera is on.
7. Do not have any floating objects, such as leaves, strings, or ribbons in the 3M motion detection zone of cameras, to avoid mistaking photograph or videos.
8. Do not keep camera next to hot irrelevant objects, air conditioner exhaust vents, and light, etc. to avoid mistaking photos or videos.

1.5 Key Features

- a. Programmable 5/8/12 Megapixel high-quality resolution;
- b. Especially designed function buttons for user's conveniences;
- c. **Optional to turn on/off camera speaker;**
- d. 40 pcs IR LEDs for flash range as 20 meters;
- e. Adjustable PIR sensitivity;
- f. Multi-shot pictures (up to 7 pics per trigger);
- g. Impressive quick trigger time: 0.8-1s (GPRS trigger time is 1.2s);
- h. Support standard 6~12V solar panel;
- i. Color pictures during day; black and white at night.
- j. Adjustable delay between motions;
- k. With 8 AA alkaline batteries, the longest standby time is up to 6 months;
- l. Available operation temperature: -20°C to 60°C;
- m. Time Lapse for automatically and constantly shooting of pictures/videos at preset interval;
- n. With specified Timer, camera can be programmed to work only during preset time period every day;
- o. Stamp of **USER LABEL**, date, time, temperature and moon phase on every picture enables you to identify where and when the camera shot photos;
- p. Built-in 2.0" TFT color screen to review photos and videos in camera.
- q. Audio Recording brings you heart pumping like ever before;
- r. Two different TV OUT settings help you review photos/videos even from Television.


Below are for GPRS Model only

- s. With SMS/MMS/GPRS/SMTP/HTTP function, camera can transmit photos to 1-4 settled mobile phones and 1-4 email accounts according to set intervals constantly at lower battery consumption.


- t. SMS alert when battery is low;
- u. SMS to realize various configurations;
- v. SMS to enable camera to shoot a photo and send back instantly;
- w. Support most 2G and most 3G SIM cards to get real-time photos;

2. Whole View and Details of Camera


2.1 Figure 1: Front View of Camera;

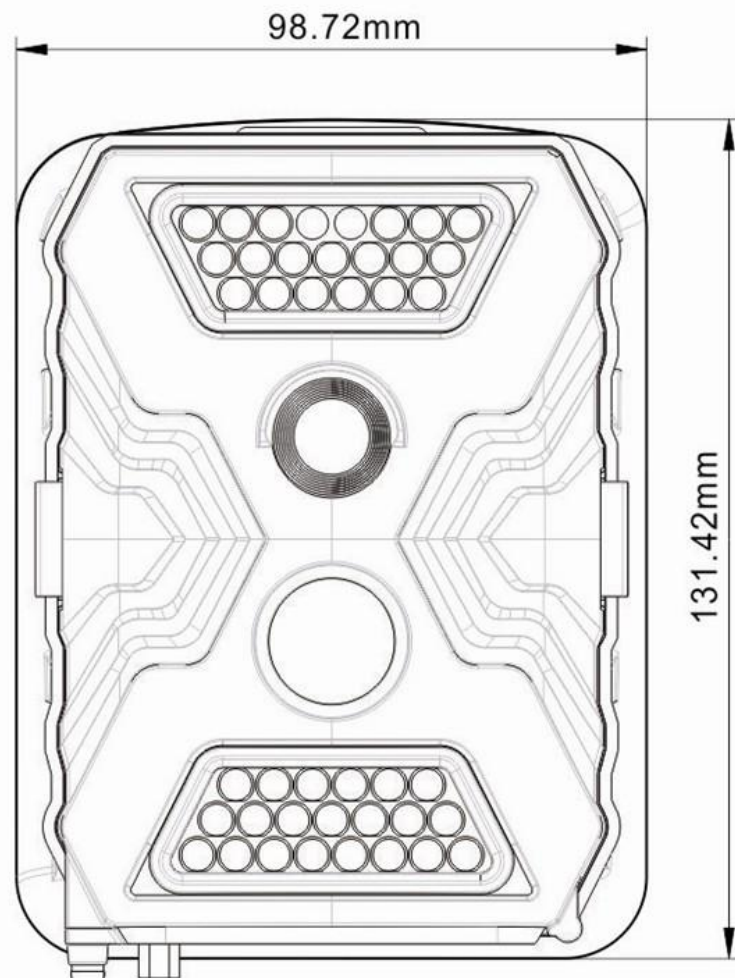



2.2 Figure 3.2: Bottom View of Camera;

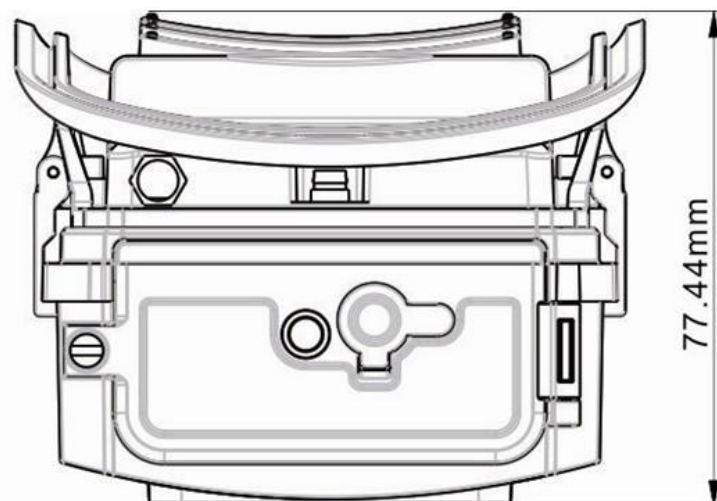

2.3 Figure 3.3: Side View of Camera.

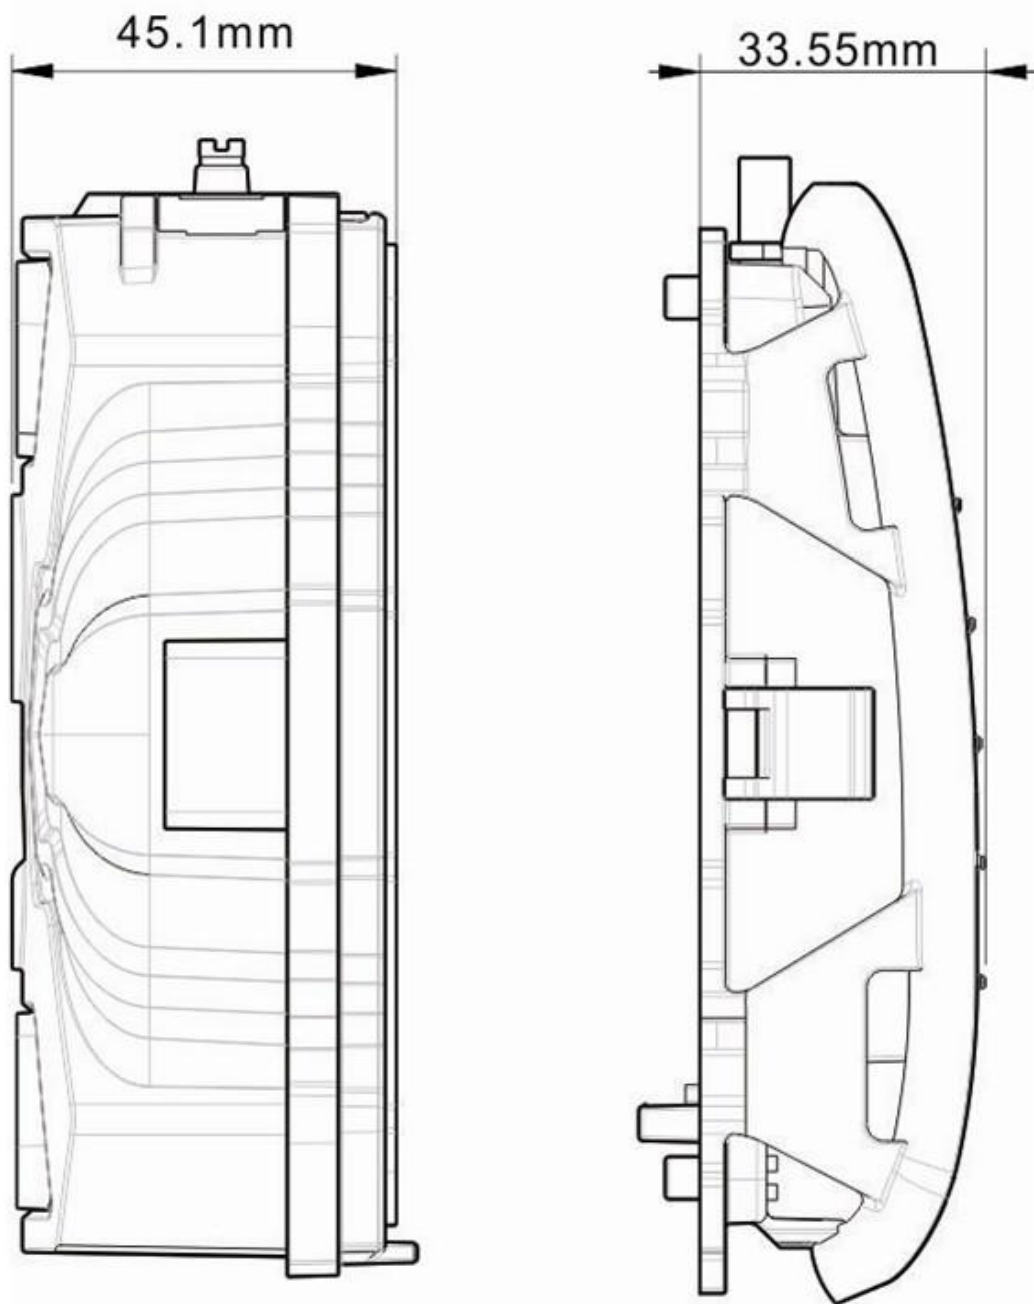

2.4 Figure 3.4: Internal View of Camera

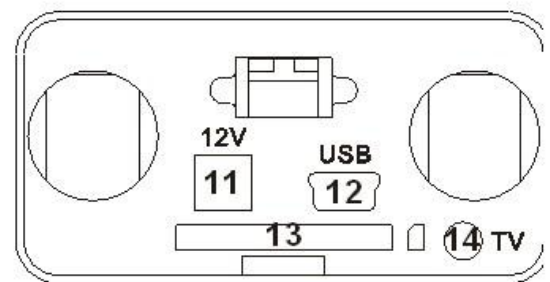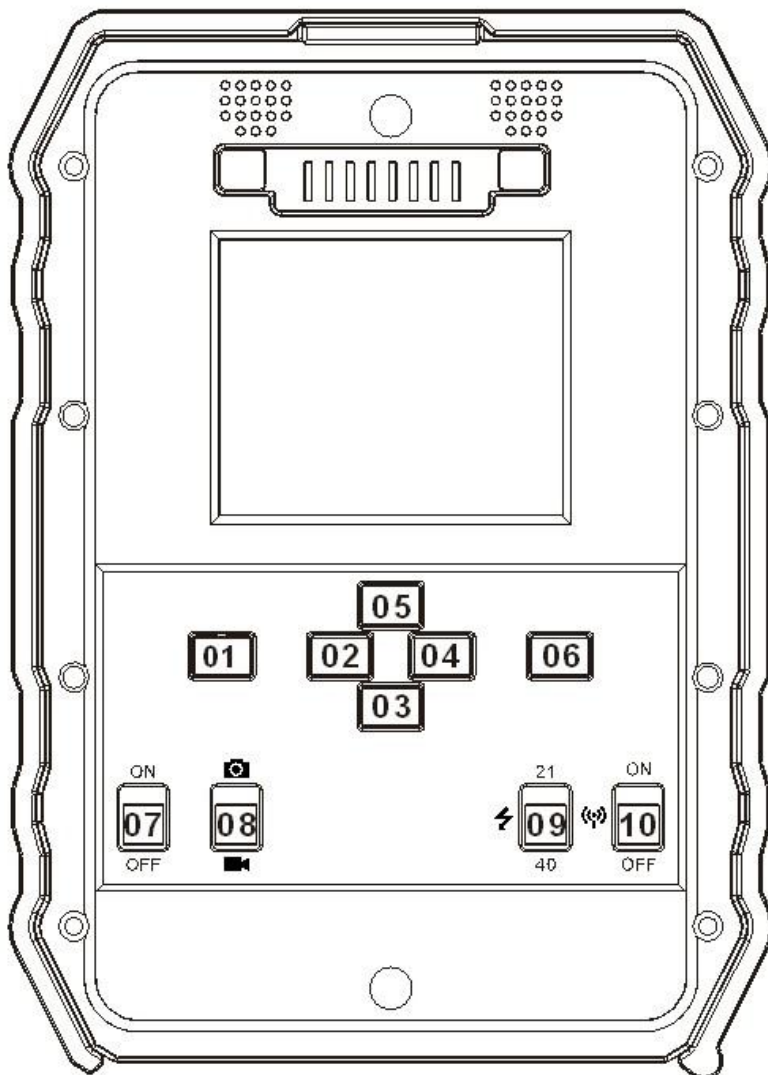

Introduction of each button

a) Press Buttons

01: Menu; **02/ 03/ 04/ 05:** navigation arrow buttons; **06:** OK

b) Switch Buttons

07: Power Switch; **08:** Camera/Video Switch; **09:** IR LEDs Group Switch; **10:** GPRS Switch

c) Interfaces

11: 12V DC in; **12:** USB Port; **13:** SD Card Slot; **14:** TV Out.

2.5 Function Keys & Other Details

A. Switch Buttons

Power Switch	Switch up: Power On —PIR intelligent automatically monitoring; light sensor flashes 5 times before entering Mode “Power On” Switch “On”, press “OK” once to wake up camera LCD screen to enter TEST Mode; Press and hold button “OK” for 5 sec to get back to mode “Power On” Switch down: OFF —Camera stops working.
Video/Photo Switch	Switch up: Pic —Photographing Switch down: Video —Video Recording
IR LEDs Group Switch	Switch up: 19 —up side 19 pcs IR LEDs work Switch down: 40 —all 40 IR LEDs work
GPRS Switch	Switch up: On —GPRS function enabled; Switch down: Off —GPRS function disabled.

B. Navigation buttons

- Power Switch by “On”, press “OK” once to wake up camera LCD screen to enter TEST Mode;
- Test mode, Press “Menu” once to enter camera setting menu; Press “OK” to shoot photo(s) or video clips.
- To navigate the interface by pressing “←”, “↑”, “→”, or “↓”, press “OK” for selection. To modify the selection, press “↑” and “↓” again and press “OK” to confirm. To return to the previous menu, press “Menu”.
- Press and hold button “OK” for 5 sec to get back to mode “Power On”

3. Quick Start

3.1 How to start the camera?


Switch button ⑦ to “ON”, press button ⑥ “OK” once to wake up camera LCD screen (to enter TEST Mode.)

3.2 How to set the functions?

- Test mode, Press button ① “Menu” once to enter camera setting menu;
- To navigate menu interface by pressing “←”, “↑”, “→”, or “↓”, press “OK” for selection. To modify the selection, press “↑” and “↓” again and press “OK” to confirm. To return to the previous menu, press “Menu”.
- Exit Menu, then press button ⑥ “OK” for 5 sec to enable camera to work automatically by itself.
- Switch button ⑧ to switch “Photographing” / “Video Recording”;

G. Switch button ⑨ to turn on 19 IR LEDs or whole 40 IR LEDs.

H. Switch button ⑩ to turn on/off GPRS function.

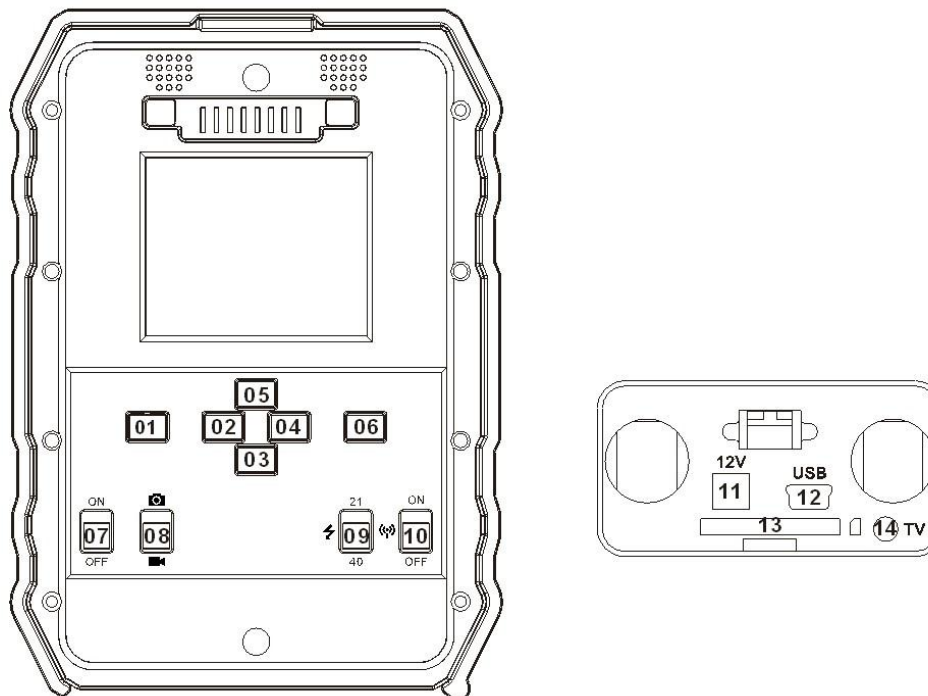

4. Operation List

4.1 Video/Photo Playback

In **Test Mode** without pressing button “Menu”: press arrow button “↑” to enter Playback; press “←” and “→” for selection, “OK” to play photo/video. Press button “↑” again to return. Press “Menu” button to initiate Deletion of files or Format of SD card.

4.2 Delete:

a. Delete one: delete selected photo/video;

b. Delete All.

press “↑” and “↓” for selection, “OK” to confirm, “menu” return back to previous interface.

4.3 Format of SD Card

a. No

b. Yes: to format SD card via camera.

press “↑” and “↓” for selection, “OK” to confirm, “menu” return back to previous interface.

4.4 Operation Menu

Test mode, Press “Menu” once to enter camera setting menu; to navigate setting interface by pressing “←”, “↑”, “→”, or “↓”, press “OK” for selection, and “Menu” to

return back to previous menu.

Main Menu	Default Setting	Functions Description
1. User Label	OFF	Select "ON" to set 4 digits/ alphabets for each camera. Such function can help user to identify photos are from where and which camera.
2. Camera + Video	OFF	Select "ON", camera shoots photo(s) first, then video upon same trigger event based on Video Length and Multi-shot user configured.
3. Multi-Shot	1P	Optional 1/2/3/4/5/6/7 photos per trigger
4. Image Size	5MP	12MP/8MP/5MP 4000x3000, 3264x2448, 2592x1944
5. Video Size	640	HD/640/320: 1080x720/640x480/320x160
6. Video Frame	30FPS	30fps/15fps, programmable
7. Digital Zoom	NO	Lens focus room in 2/ 3/ 4 times.
8. Video Length	5 Sec	5-60s video clips
9. PIR Sensitivity	Middle	High/ Middle/ Low; Higher sensitivity is 1) more sensitive to movements by smaller subjects; 2) longer detection distance; 3) easier for sensor to detect difference between body heat and outdoor temperature; 4) easier to trigger camera to record. In high temperature environment, body heat of subjects and environment temperature is hard to tell by camera, suggest set High .
10. Timer	OFF	Select "ON", to set the beginning time and end time (hour/minute); camera will only work during the time user set.
11. Time Lapse	OFF	Select "ON", to set the interval; PIR sensor of camera will be turned off; camera will shoot pics or video clips automatically upon the interval user set. Configurable interval: 5 seconds to 24 hours.
12. Delay	OFF	The pre-set time interval you desire between photo/video recordings upon motion. This option prevents from taking too many photos or videos. Example: Camera will wait 1 minute between photo/video recordings with motion Configurable delay time: 5 seconds to 2

		hours.
13. Audio Recording	ON	Select "ON", audio available in video clips.
14. TV Out	N	NTSC/PAL
15. Stamp	ON	To select or cancel imprinting of programmed user label, moon phase, temperature, date, and time on photos.
16. Frequency	50Hz	Improper setting may cause camera screen flicker
17. Language	English	English...
18. Time/Date	01/ 01/ 2011 12: 00	Date/Time; Date: "month/ date/ year"; Time: "hour/minute"
19. Camera Sound	ON	Select "OFF" to turn off camera speaker.
20. Cycle Recording	OFF	Select "ON", camera will continue to record photos/videos by deleting earliest photos or video clips recorded in SD card.
21. Password	OFF	Select "ON" to enable password protection for your camera; support totally 6 digits/ alphabets long password access.
22. Reset	No	Select "Yes" to reset camera back to factory default setting.

5. Specification

Image Sensor	5 / 8 / 12 Mega Pixels Color CMOS
Effective Pixels	2560x1920
Day/Night Mode	Yes
IR arrange	20m
IR Setting	Top: 19 LED, Foot: 21LED
Memory	SD Card (8MB – 32 GB)
Operating keys	10
Lens	F=3.0; FOV=52°; Auto IR-Cut-Remove (at night)
LCD Screen	2" TFT, RGB, 262k
PIR Sensitivity	3 sensitive levels: High / Normal / Low
PIR distance	12m – 15m
PIR Angle	60°
Picture size	5MP/8MP/12MP 2592x1944/3264x2448/4000x3000
Picture Format	JPEG
Video resolution	720P (1280x720), 640x320, 320x160
Video Format	AVI
Video Length	1-60sec. programmable
Shooting Numbers	1-7
Trigger Time	0.8-1s
Trigger Interval	2s-5s

Camera + Video	Yes
Playback Zoom in	2x, 3x, 4x
Device Serial No.	Yes
Time Lapse	Yes
Beep Sound	ON/OFF
SD Card cycle	ON/OFF
Operation Power	Battery: 6V; DC: 12V
Battery Type	8AA
External DC	12V
Stand-by Current	0.15mA
Stand-by Time	4~6 months (4×AA~8×AA)
Auto Power Off	auto switch to mode “ON” in 60s without any operations
Power Consumption	150mA (+650mA when whole 40 IR LEDs light up)
Low battery Alert	4.8V (4.8V: alert; 4.6V: power off)
Interface	TV out/USB/SD Card/DC Port
Mounting	Strap; Tripod
Operating Temperature	-25°C to 60°C
Storage temperature	-30 °C to 70°C
Operation Humidity	5%-90%
Waterproof spec	IP54
Dimensions	131.42 x98.72 x77.44mm
Weight	300g
Certification	CE FCC RoHs

